

ZINWELL®

Brite-View

BLS-2000

User Manual

Table of Contents

Chapter 1 Introduction

1.1 Important Notices.....	2
1.2 Product Functions.....	2
1.3 Package Contents.....	3

Chapter 2 Installation

2.1 Product Overview.....	4
2.1.1 Front view of Brite-View.....	4
2.1.2 Rear view of Brite-View.....	5
2.2 System Installation.....	6

Chapter 3 Operation Instruction

3.1 Initial Setting.....	7
3.2 IR Control.....	8
3.3 PICTURE Setting.....	9
3.4 PREFERENCE Setting.....	9
3.4.1 PESOLUTION setting.....	9
3.4.2 ASPECT setting.....	10
3.5 RESET setting.....	10
3.6 INPUT source setting.....	10

Chapter 4 Other Information

4.1 Troubleshooting.....	11
4.2 Specifications.....	12

Chapter 1 Introduction

Thanks for your purchase of Zinwell Brite-View. With Brite-View, you can turn your existing standard video into a high quality picture on your display devices. The system set up is very easy and no additional hardware or software required. You don't need to learn a complicated set up procedure and you can enjoy your Brite-View with just plug and play.

1.1 Important Notices

Please use the Brite-View under a normal environment

1. Try to avoid the following circumstances.
 - Avoid exposure the Brite-View to direct sunlight or high temperatures
 - Avoid exposure the Brite-View to moisture or high humidity
 - Avoid positioning the Brite-View in unstable places
2. Do not attempt repair yourself, the warranty does not cover repair or attempted repair by unauthorized personnel.
3. Unplug this product from AC outlet and remove batteries from IR control when this product is left unused for a long time.

1.2 Product Functions

 
- With the advanced video processing technology to improve video quality.
- Double scan conversion (15.75 KHz to 31.5 KHz) and 3:2 pull down technology.
- Full screen, true color display.
- Easy operation - With one button to select signals coming from composite VIDEO, S-VIDEO or YCbCr.
- Easy on screen display operation with hot key on IR remote control.

1.3 Package Contents


As you unpack the Brite-View, please make sure the following items were included. If any of these items are missing, call your local agencies.

- 1. Brite-Viewx1
- 2. Power supplyx1
- 3. Video cable.....x1
- 4. S-video cable.....x1
- 5. VGA cable.....x1
- 6. AAA batteriex2
- 7. IR control.....x1
- 8. User manual.....x1

1. Brite-View

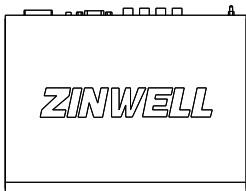

 2. Power supply

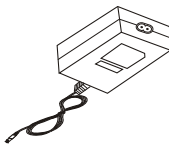


3. Video cable



4.S-video cable



 
5. VGA cable




6. AAA batteries x2



 7. IR control



 
8. User manual

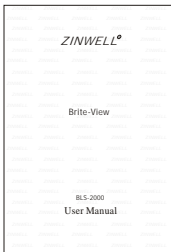

Chapter 2 Installation

2.1 Product Overview

 
2.1.1 Front view of Brite-View

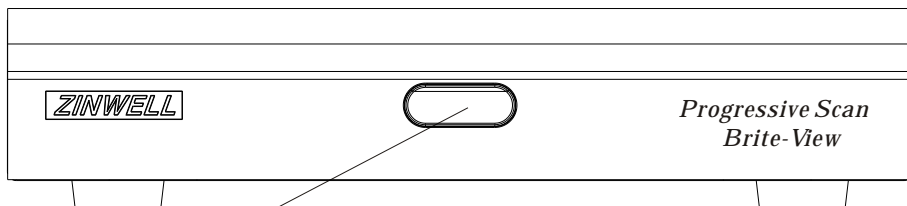

Power indicator and IR receiver

Using blue LED to indicate the status of power and IR receiver

 2.1.2 Rear view of Brite-View

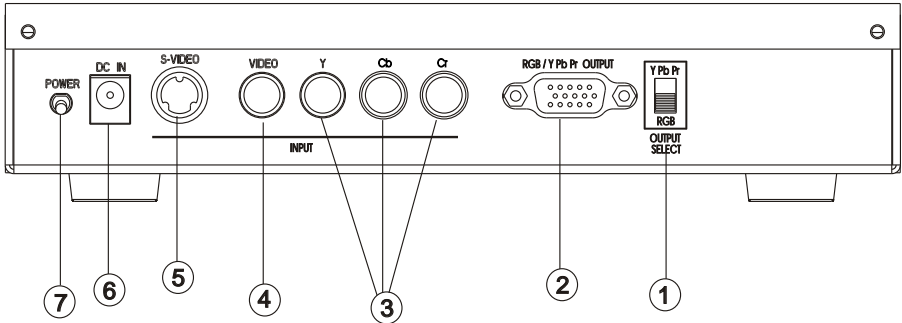

① OUTPUT SOURCE SWITCH

Please check your output device and switch YPbPr or RGB to select output signal.

② VGA OUTPUT

Please use the VGA OUTPUT to connect your progressively scanned TV or projector.

③ YCbCr INPUT

Please connect the RCA cable to DVD player.

④ VIDEO INPUT

Please connect the external video from VCR, LD, V8 or video game to the VIDEO INPUT of box.

⑤ S-VIDEO INPUT

If the external video is s-video, please connect to the S-VIDEO INPUT of box.

 
⑥ DC IN

Please connect to your 12V power supply.

⑦ POWER

Switch between power-on and power-off.

2.2 System Installation :

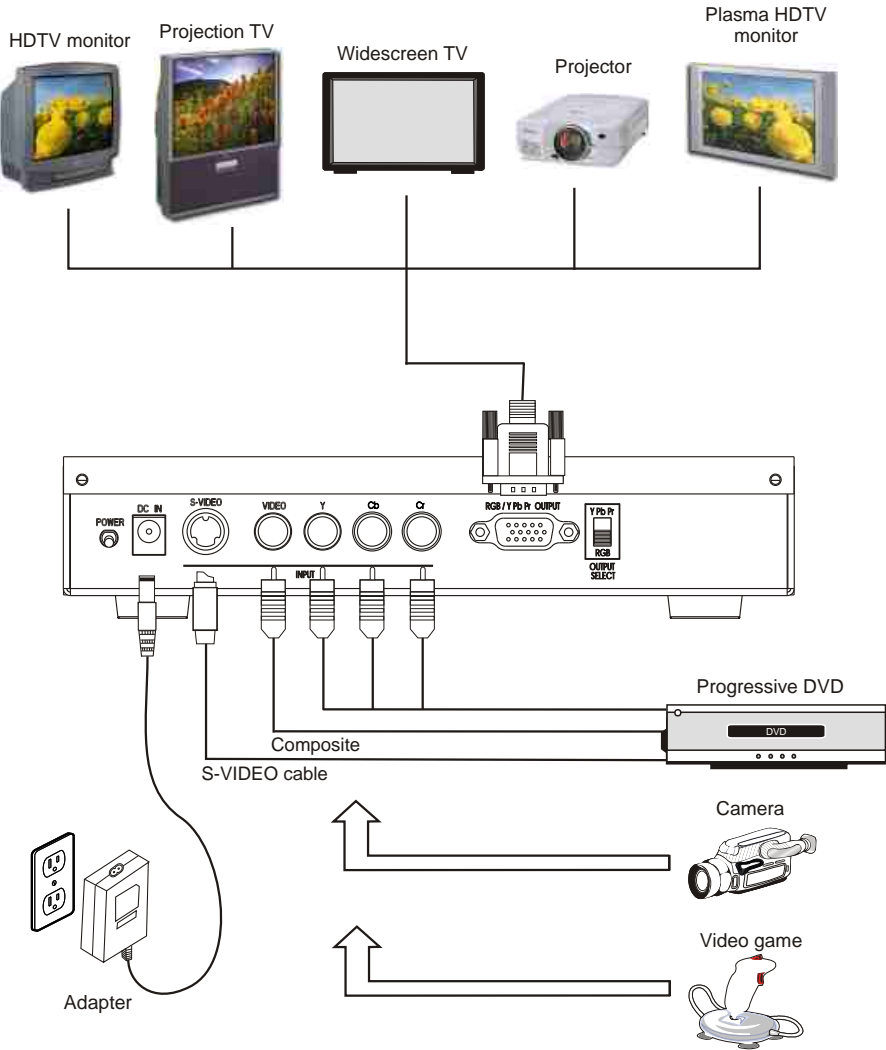

! Warning: please turn off the power of all devices before connection.

Chapter 3 Operation Instruction

 
3.1 Initial Setting

When you finish the connections of Brite-View, please refer to the following instructions of IR control and start the system setting, because all the function settings are in the IR control.

Steps:

1. Please install 2 AAA batteries into IR control.
2. Please refer to p6 for your configuration.
3. Turn on the power.
4. Press the "Video", "S-Video" or "YCbCr" on IR control button to select input signal Source.
5. Switch YPbPr or RGB on Brite-View to select output signal.

3.2 IR Control

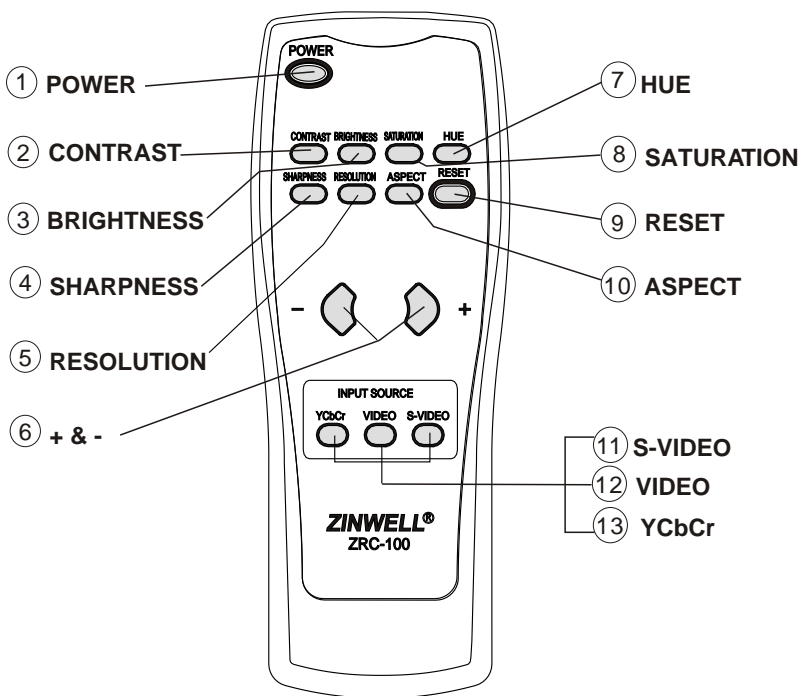

① POWER

Switch on/off

② CONTRAST

Display contrast bar , press" + "or" - "to adjust

③ BRIGHTNESS

Display BRIGHTNESS BAR , press" + "or" - "to adjust

④ SHARPNESS

Display SHARPNESS , press" + "or" - "to adjust

⑤ RESOLUTION

Switch to select RESOLUTION of 1280*1024,1024*768,800*600,640*480.

⑥ + & -

Adjustment keys

⑦ HUE

Display HUE , press" + "or" - "to adjust

⑧ SATURATION

Display SATURTION , press" + "or" - "to adjust

⑨ RESET

Select RESET to return adjustments back to factory setting

⑩ ASPECT

Switch to select ratio 4:3 or 16:9

⑪ ~ ⑬ Input source

Select one of S-Video , Video , YCbCr to set up input source

3.3 PICTURE Setting

The **PICTURE** settings are provided by hot key adjustment on remote controller.

When you press the **CONTRAST, BRIGHTNESS, SATURATION, HUE, and SHARPNESS** buttons on remote controller, an adjustment bar shall show up on the middle down of display screen; to press "+" or "-" to adjust the value, and the bar shall disappear automatically after 5 seconds.



3.4 PREFERENCE Setting

3.4.1 RESOLUTION: to press RESOLUTION button on remote Controller to select

A small indicator shall show up on the right top of display screen.

RGB mode: 640 x 480, 800 x 600, 1024 x 768, 1280 x 1024.

YPbPr mode: 480p, 720p, 1080i.



3.4.2

ASPECT: to press ASPECT to select 4:3 or 16:9

- This selection is available only for RGB mode output.



4:3



16:9

3.5

RESET: to press RESET to return all system settings (including PICTURE settings, ASPECT, RESOLUTION, INPUT source) to factory default value. When you press RESET button, all the previous personal settings shall be cleared.

3.6

INPUT source: to press Video (Composite Video), S-Video, or YCbCr, button to select input signal. A small indicator shall show up on the right top of display screen.




Chapter 4 Other Information

4.1 Troubleshooting

Symptom	Solution
No picture on display	<ul style="list-style-type: none">● Make sure the power cord is connected to an AC outlet, DC plug is connected to DC IN port and the power LED is on.● Make sure the display's power is on.● Check the connection of your source signal.● To reset the Brite-View, unplug the DC IN adapter from the unit and then plug it back in again.
Video distorted	<ul style="list-style-type: none">● Check all of the connection.
The remote control out of function	<ul style="list-style-type: none">● Make sure batteries are installed.● Check remaining battery life.
※ If you still have difficulties not resolvable by using the tips described above, please unplug and plug in the AC cord to reset your Brite-View; otherwise, please call your local agency for servicing.	

4.2 Specifications

POWER	100 ~ 240VAC 0.4A 50/60HZ - 12VDC 1.25A OUTPUT
VIDEO INPUT	Composite video RCA connector
S-VIDEO INPUT	S-Video 4-pin mini DIN
YCbCr INPUT	3 RCA connector
VGA OUT	D-Sub 15 pin Female connector
Power Consumption	15W Typical
Operating Temperature	5°C ~ 45°C
Operating Humidity	5% ~ 80%
Dimensions	206(L) x 157(W) x 45(H) mm
Weight	1080g
IR Control	14 Buttons (AAA batteries x2)

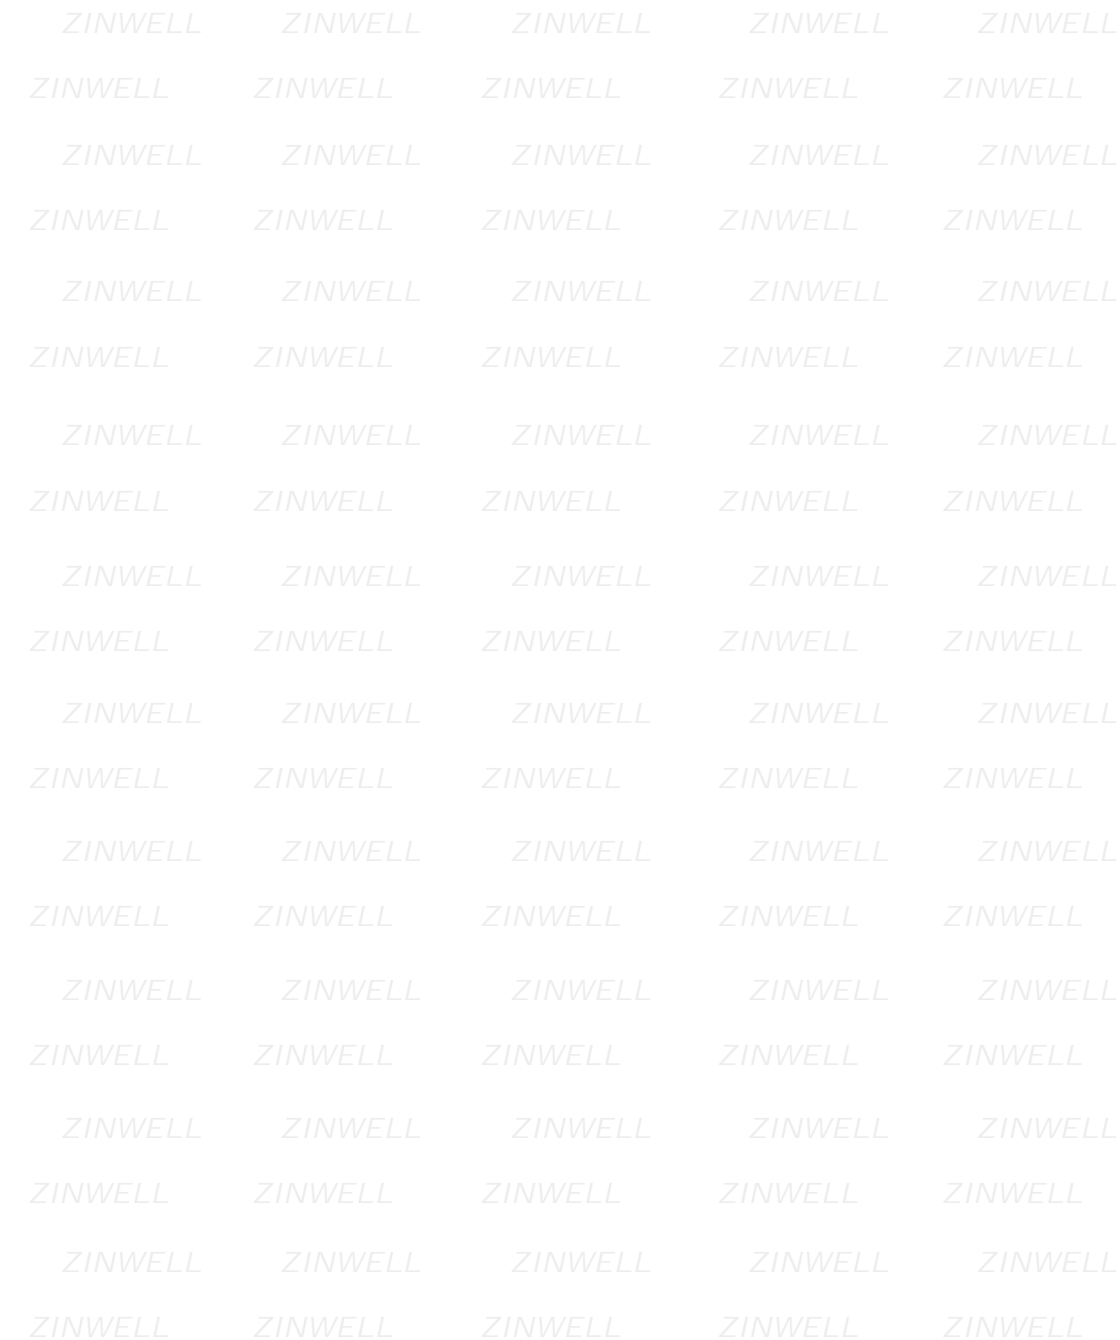 

Headquarters : 7F, 512, Yuan Shan Rd., Chung Ho City, Taipei Hsien 235, Taiwan
Tel: 886-2-2225-1929 Fax: 886-2-2225-1447 e-mail: zinwell@zinwell.com.tw <http://www.zinwell.com.tw>

Hsinchu Plants (Sat-Comm & Satellite TV Product Sales) : 2, Wen Hua Rd., Hsin Chu Industrial Park, Hsin Chu Hsien 303, Taiwan
Tel: 886-3-597-9050 Fax: 886-3-597-8857 e-mail: sales@zintech.com.tw